
SCC Inc.

Technical Instructions

Document No. VA-1000 July 9, 2019

VA Series

VA... Valve Actuator Assemblies with VKG Butterfly Valves

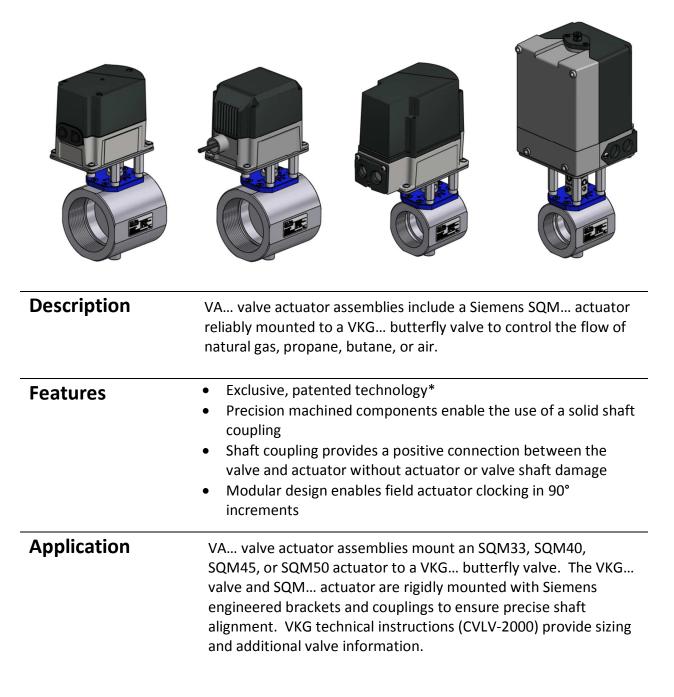

Product Part Numbers

The following chart provides VA... valve actuator assembly part number identification including an SQM33, SQM40, or SQM45 actuator. Technical instructions for SQM33 (N7813), SQM40 (N7817), or SQM45 (N7814) actuators are available at www.scccombustion.com.

		VA 33	- N	F - 200 - N4			
Valv	e Actuat	tor Assembly	\top \top				
Actı	uator						
33	= SQM33.5	550A9 (stepper, for use with LMV3)					
40.11		115R11 (12.5 sec, 135 Ohm/2-10 VDC, high/low fire feedback)					
		145A21 (12.5 sec, 4-20 mA/135 Ohm/2-10 VDC)					
40.15	= SQM40.1	155R11 (12.5 sec, 4-20 mA, independent aux switch)					
40.16	= SQM40.1	165 (12.5 sec, 3-position, high/low fire feedback)					
40.18	= SQM40.1	185R11 (12.5 sec, 3-position, 3 independent aux switches)					
		215R11 (25 sec, 135 Ohm/2-10 VDC, high/low fire feedback)					
		245A21 (25 sec, 4-20 mA/135 Ohm/2-10 VDC)					
		255 (25 sec, 4-20 mA, independent aux switch)					
		265 (25 sec, 3-position, high/low fire feedback)					
		275R10 (25 sec, high/low basic version)					
		285R11 (25 sec, 3-position, 3 independent aux switches)					
45.2	= SQM45.2	295B9 (stepper, for use with LMV5)					
Volt	age						
Blank	= 120 Vac	: SQM40 or standard SQM33 or SQM45	_				
(220)	= 220 Vac	: (not available for SQM33 & SQM45 actuators)					
<u> </u>	Thread						
N	= NPT						
R	= Rp						
Port	Size						
F	= Full Port						
М	= Medium Port						
R	= Reduced	d Port					
Pipe	Size						
(mm)							
050	= 1/2"	\rightarrow Full Port only					
075	= 3/4"	\rightarrow Full Port only					
100	= 1"	\rightarrow Full Port & Medium Port					
125	= 1-1/4"	→ Full Port & Medium Port					
150	= 1-1/2"						
200	= 2"						
250	= 2-1/2"						
300	= 3"						
400	= 4"	\rightarrow NPT only					
۸.ct·	iator NEN	MA Bating					
ALL		MA Rating					

Blank = NEMA 12 SQM33 or SQM45; NEMA 4 SQM40 N4 = NEMA 4 SQM33 or SQM45

Product Part Numbers (continued)

The following chart provides VA... valve actuator assembly part number identification including an SQM50 actuator. All VA... assemblies with an SQM5... actuator and a VKG... butterfly valve include the AGA55.5 NEMA 4 kit. Technical instructions for SQM50 (155-517) actuators are available at www.scccombustion.com.

Valv	$\frac{VA}{F} = \frac{50.4}{T} = \frac{Z}{T} = \frac{3}{T} = \frac{N}{T} = \frac{200}{T}$
Actu	lator
50	= SQM50
Torq	jue / Timing
2 3 4	= 8 sec with 90 in-lb (90° stroke) = 12 sec with 140 in-lb (90° stroke) = 25 sec with 140 in-lb (90° stroke)
Cont	trol Board
A H K Z	 = AGA56.41A (4-20 mA input) = AGA56.1A97 (position proportional control) = AGA56.42A (0-135 Ω input) = AGA56.43A (0-10 Vdc input) = AGA56.9 (all inputs/outputs)
	= ASZ12.30 (1000Ω, 90°) on "G", "H", "K", or "Z" board; none on "A" board = ASZ12.30 (1000Ω, 90°) on "A" board only = ASZ22.30 (1000Ω/1000Ω, 90°)
Volt	age
(220)	= 120 Vac = 220 Vac = 24 Vac
Pipe	Thread
N R	= NPT = Rp
Port	Size
F M R	= Full Port = Medium Port = Reduced Port
Pipe	Size
(mm) 050 075 100 125 150	(inches) = $1/2" \rightarrow Full Port only$ = $3/4" \rightarrow Full Port only$ = $1" \rightarrow Full Port & Medium Port$ = $1-1/4" \rightarrow Full Port & Medium Port$ = $1-1/2"$ = $2"$
200 250 300	= 2-1/2" = 3"

Actuator Mounting Instructions

In some cases, the actuator may need to be removed from the valve temporarily during piping. Additionally, the actuator and bracket can be rotated relative to the valve for wiring purposes. The instructions below and the exploded views in Figures 1 and 2 are a guide to proper disassembly and reassembly of a VA... valve actuator assembly with a VKG... butterfly valve.

SQM33/40/45 Actuators

Disassembly

- 1. Start with the valve at the closed / 0° position.
- 2. Remove the (4) #8 pan head screws (#2 Phillips drive) and associated washers that fasten the actuator to the large bracket.
- 3. Loosen the M6 socket set screw (3mm hex drive) that fastens the actuator to the coupling.
- 4. Lift the actuator off of the large bracket and out of the coupling.
- 5. Remove the (4) M6 flat head socket cap screws (4mm hex drive) from the large bracket and lift the bracket off of the 1/2" hex standoffs.
- 6. If more clearance is needed for piping, remove the (4) 1/2" hex standoffs using a crescent wrench. Also, remove the M4 socket cap screw (3mm hex drive) and lock washer fastening the coupling to the valve shaft, and lift the coupling off of the valve. If the actuator is being rotated relative to the valve for wiring purposes, remove the M4 socket cap screw (3mm hex drive) and lock washer fastening the coupling to the valve.

Reassembly

- 7. If the (4) 1/2" hex standoffs were removed in step 6, thread them back into the threaded holes on top of the valve and tighten with a crescent wrench. If the coupling was removed in step 6, slide the coupling back over the valve shaft. Insert the M4 socket cap screw and lock washer through the coupling and valve shaft so that the coupling is in the desired position of the (4) clockable positions. The valve should still be at the closed / 0° position.
- 8. Fasten the large bracket back onto the standoffs with the (4) M6 flat head socket cap screws (4mm hex drive).
- 9. Place the actuator onto the large bracket. The shaft should easily slide into the coupling.
- 10. Fasten the actuator to the large bracket with the (4) #8 pan head screws (#2 Phillips drive) and associated washers. Then, tighten the M6 socket set screw (3mm hex drive) to secure the coupling to the actuator shaft.

Actuator Mounting Instructions (continued)

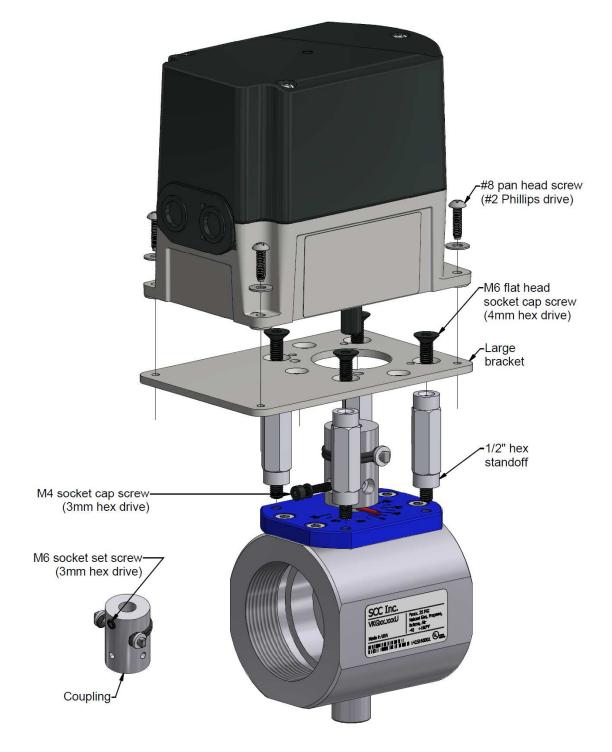


Figure 1: Exploded View of VA45.2-NF-200

Actuator Mounting Instructions (continued)

SQM50 Actuators

Disassembly

- 1. Start with the valve at the closed / 0° position.
- 2. Using a 10mm open end wrench (or crescent wrench), remove the (4) M6 hex head cap screws and lock washers that fasten the actuator to the bracket.
- 3. Loosen the #12 socket cap screw (5/32" hex drive) that clamps the actuator into the top hub of the coupling.
- 4. Pull the actuator off of the bracket and out of the coupling.
- 5. Remove the (4) M6 flat head socket cap screws (4mm hex drive) from the bracket and lift the bracket off of the 1/2" hex standoffs.
- 6. If more clearance is needed for piping, remove the (4) 1/2" hex standoffs using a crescent wrench. Also, remove the M4 socket cap screw (3mm hex drive) and lock washer fastening the coupling to the valve shaft, and lift the coupling off of the valve.

Reassembly

- 7. If the (4) 1/2" hex standoffs were removed in step 6, thread them back into the threaded holes on top of the valve and tighten with a crescent wrench.
- 8. Fasten the bracket back onto the standoffs with the (4) M6 flat head socket cap screws (4mm hex drive) in the desired position of the (4) clockable positions.
- 9. Using a 10mm open end wrench (or crescent wrench), fasten the actuator to the large bracket with the (4) M6 hex head cap screws and lock washers.
- 10. Tighten the #12 socket cap screw (5/32" hex drive) to clamp the top coupling hub around the actuator shaft.

Actuator Mounting Instructions (continued)

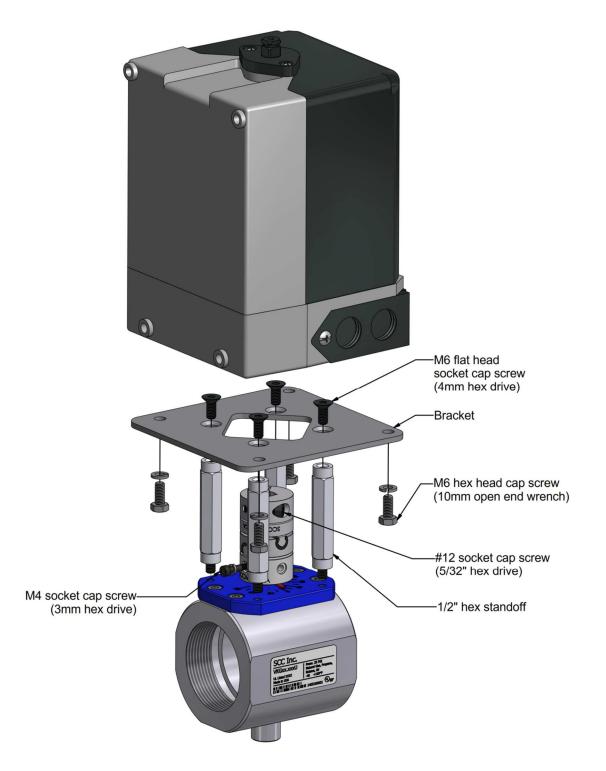


Figure 2: Exploded View of VA50.4-NF-200

Dimensions

VA40... and Standard VA33... and VA45... Assemblies

Dimensions in inches; millimeters in brackets

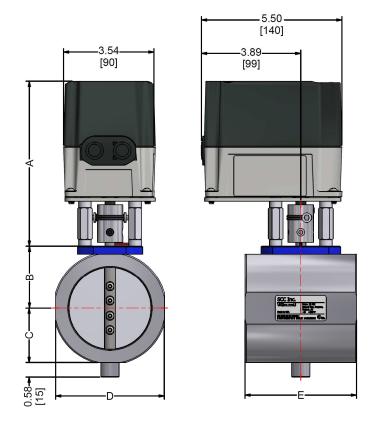


Table 1: VA40... and Standard VA33... and VA45... Dimensions

Actuator	А	Assembly Part Number Suffix	В	с	D	E
	6.45 [164]	050	1.35 [34]	1.04 [26]	2.08 [53]	3.25 [83]
SQM45		075	1.35 [34]	1.04 [26]	2.08 [53]	3.25 [83]
		100	1.35 [34]	1.04 [26]	2.08 [53]	3.25 [83]
	6.44 [164]	125	1.53 [39]	1.22 [31]	2.44 [62]	3.25 [83]
SQM33		150	1.63 [41]	1.31 [33]	2.63 [67]	3.25 [83]
		200	1.87 [47]	1.55 [39]	3.11 [79]	3.25 [83]
	7.75 [197]	250	2.18 [55]	1.87 [47]	3.74 [95]	4.38 [111]
SQM40		300	2.44 [62]	2.13 [54]	4.26 [108]	4.38 [111]
		400	2.96 [75]	2.64 [67]	5.28 [134]	5.00 [127]

Dimensions

NEMA 4 VA33... and VA45... Assemblies

Dimensions in inches; millimeters in brackets

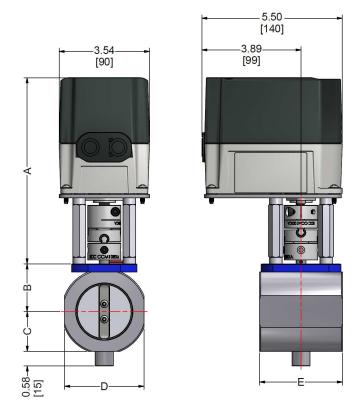


Table 2: NEMA 4 VA33... and VA45... Dimensions

Actuator	А	Assembly Part Number Suffix	В	С	D	E
	7.30 [185]	050	1.35 [34]	1.04 [26]	2.08 [53]	3.25 [83]
SQM45		075	1.35 [34]	1.04 [26]	2.08 [53]	3.25 [83]
		100	1.35 [34]	1.04 [26]	2.08 [53]	3.25 [83]
	7.29 [185]	125	1.53 [39]	1.22 [31]	2.44 [62]	3.25 [83]
SQM33		150	1.63 [41]	1.31 [33]	2.63 [67]	3.25 [83]
		200	1.87 [47]	1.55 [39]	3.11 [79]	3.25 [83]
		250	2.18 [55]	1.87 [47]	3.74 [95]	4.38 [111]
		300	2.44 [62]	2.13 [54]	4.26 [108]	4.38 [111]
		400	2.96 [75]	2.64 [67]	5.28 [134]	5.00 [127]

Dimensions (continued)

VA50... Assemblies

Dimensions in inches; millimeters in brackets

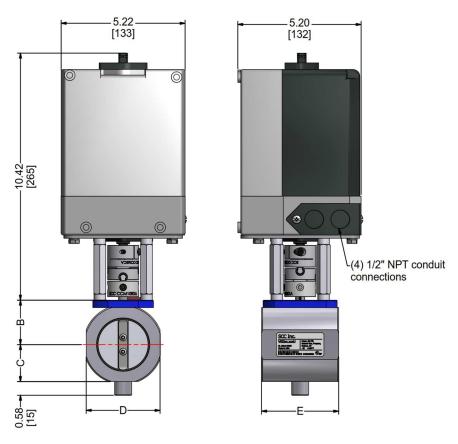


Table 3: VA50... Dimensions

Assembly Part Number Suffix	В	С	D	E
050	1.35 [34]	1.04 [26]	2.08 [53]	3.25 [83]
075	1.35 [34]	1.04 [26]	2.08 [53]	3.25 [83]
100	1.35 [34]	1.04 [26]	2.08 [53]	3.25 [83]
125	1.53 [39]	1.22 [31]	2.44 [62]	3.25 [83]
150	1.63 [41]	1.31 [33]	2.63 [67]	3.25 [83]
200	1.87 [47]	1.55 [39]	3.11 [79]	3.25 [83]
250	2.18 [55]	1.87 [47]	3.74 [95]	4.38 [111]
300	2.44 [62]	2.13 [54]	4.26 [108]	4.38 [111]
400	2.96 [75]	2.64 [67]	5.28 [134]	5.00 [127]

Information in this publication is based on current specifications. The company reserves the right to make changes in specifications and models as design improvements are introduced. Product or company names mentioned herein may be the trademarks of their respective owners. © 2019 SCC Inc.

SCC Inc. 1250 Lunt Avenue Elk Grove Village, IL 60007 U.S.A. Your feedback is important to us. If you have comments about this document, please send them to techsupport@scccombustion.com

Document No. VA-1000 Country of Origin: US Page **10**